

# My Secret Treasure Chest

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack My Secret Treasure Chest guards your private memories and stores your favorite things. The treasure chest can only be opened by your password. Use the mirror inside to be sure you look your best!

## INSTALLING BATTERIES

Your treasure chest requires three AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the chest for several weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

1. Use a Phillips screwdriver to loosen the screw from the battery compartment cover, then remove the cover.

2. Insert the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.


3. Replace the cover and tighten the screw.

When the chest stops operating properly, replace the batteries.

**Note:** Removing the batteries clears your password. You must input your password again.


## RECORDING YOUR PASSWORD

Before using your treasure chest, you must choose a password recognition level and record a password.

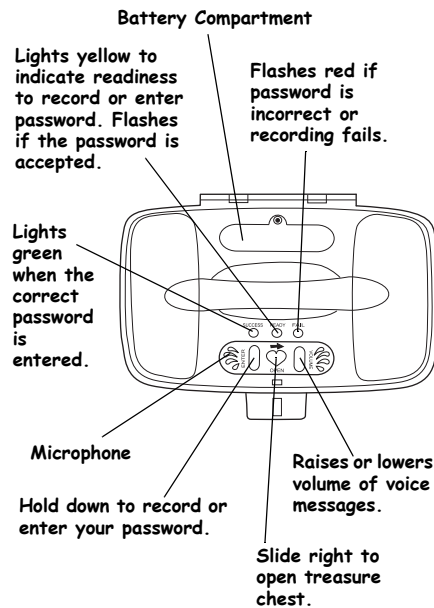

**Note:** To ensure that the treasure chest correctly records your password, be sure to find a quiet place to record your password.

1. Use a Phillips screwdriver to loosen the screw from the battery compartment cover, then remove the cover.
2. Hold down **UNLOCK**, then slide **OPEN** to the right. The latch opens.

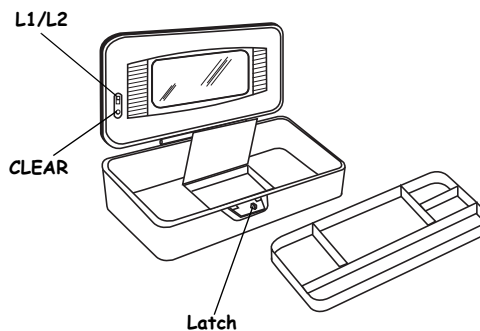

3. Set the password recognition level. If you want your password to be accepted regardless of voice speed and volume, slide L1/L2 to L1. For more security, slide L1/L2 to L2. You must now say your password at the same speed and volume as your recording.
4. Hold down **ENTER**. The yellow **READY** indicator flashes. You are prompted to record your password. The treasure chest beeps three times and the yellow indicator turns off.
5. Within about two seconds, say your password as close as possible into microphone at the top of the treasure chest.
6. After a few seconds, the treasure chest tells you the password is accepted and the yellow **READY** indicator flashes.

#### Notes:

- Do not release **ENTER** until the treasure chest responds to your password.
  - To lower the volume of the voice messages, hold down **VOLUME**. Release **VOLUME** to return to the normal volume level.
7. If the treasure chest asks you to say your password again and the red **FAIL** indicator flashes, repeat your password.
  8. After recording your password, try to enter your password while the cover is still open. If your password is not accepted, there was probably an error in recording.
  9. To re-record your password, press **CLEAR** to clear your password, then repeat Steps 3-5 to record again.

## OPENING THE TREASURE CHEST

When you close the treasure chest, it locks. You must enter your password to open it.

1. Hold down **ENTER**. The yellow **READY** indicator flashes. The treasure chest prompts you for your password, then beeps three times. The yellow **READY** indicator turns off.
2. Within about two seconds after the beeps, say your password into the microphone.
3. If your password is correct, the green **SUCCESS** indicator lights, a tone sounds, and the treasure chest tells you your password has been accepted. Release **ENTER**.
4. When the **SUCCESS** indicator lights, slide **OPEN** to the right. You hear a click as the cover unlocks.

5. If your password is incorrect, the red FAIL indicator flashes and tells you your password has not been accepted. The cover remains locked.
6. When the SUCCESS indicator turns off, the treasure chest is locked again.

Your password might not be accepted even though it is correct because:

- You said the password faster or slower than the recorded password. Say the password again at the correct speed.
- You started recording too early or too late relative to the beeps. Say your password again just after the beeps.
- Your voice is unclear or too soft. Move closer to the microphone and speak louder.
- Your environment is too noisy. Try again in a quiet environment.

If you forget your password, repeat Steps 1 to 2 of "Recording Your Password" to open it manually.

## VOICE MESSAGES

*When recording your password:*

- Please hold the button until the light turns off. Record your password.

*To open the treasure chest:*

- Please hold the button until the light turns off. Password please.

*When your password is correct, you hear the following voice message:*

- Yeah! You get it. Pull the button to open the lock.

*When your password is incorrect, you hear one of the following messages:*

- Oops! Password is not correct, once again.
- Your password is not correct! Please try again.
- Oh, please try again.
- Oh, I can't hear, repeat your password again.

*If you re-enter your password within three seconds of failed entry:*

- Oh, please try again.

*After three incorrect attempts, you hear the voice message:*

- Access denied, who are you?

*After you enter a correct password, the treasure chest tells you how many intruders have attempted access. You hear:*

- One (up to ten) intruder(s). Welcome back!

*If a failed password is entered more than ten times, when you successfully open the treasure chest it greets you with this message:*

- Intruder access. Welcome back!

*If no failed passwords have been entered, you hear this message:*

- Welcome back!

*If you press CLEAR, you hear this message:*

- Record your password again.

## CHANGING YOUR PASSWORD

To change your password at any time, open the treasure chest, press CLEAR, then re-record a new password.

## RESETTING THE TREASURE CHEST

If the treasure chest does not accept your password during recording, remove the batteries. Wait 10 seconds, then replace the batteries. Your password is cleared.

## CARE

Keep the treasure chest dry; if it gets wet, wipe it dry immediately. Use and store it only in normal temperature environments. Handle the treasure chest carefully; do not drop it. Keep the treasure chest away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the treasure chest's internal components can cause a malfunction and invalidate its warranty. If your treasure chest is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

60-1217  
08A01  
Printed in Hong Kong